

Classification: WT09-005

Reference: ITB09-050 COPYRIGHT@ NISSAN NORTH AMERICA, INC. Date:

September 29, 2009

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WARNING LIGHT ON / BLINKING

APPLIED VEHICLES: All Infiniti vehicles with Tire Pressure Monitoring System (TPMS)

## **IF YOU CONFIRM**

The TPMS warning light is illuminated steady or flashing,

## ACTIONS

STEP 1: Turn the ignition OFF and then ON (engine not running).

• If the TPMS warning lamp is illuminated steady (not flashing), the TPMS is operating normally and has detected low tire pressure in one of the tires. Go to STEP 2.

NOTE: normal tire pressure maintenance is not covered under warranty.

• If the TPMS warning lamp is flashing for approximately one minute, there is a TPMS system malfunction. Do not go to Step 2. Instead, check the DTC and refer to the Service Manual for repair instructions.

STEP 2: Leave the ignition ON (engine not running) and set the tire pressure to the recommended pressure.

• See page 2 for Important Tire Pressure Information.

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.



SERVICE BULLETIN

Each vehicle is equipped with a "Tire and Loading Information" placard (see example in Figure 1).

For factory equipped tires, follow the recommended <u>cold</u> pressure on the placard to set the tire pressure on the vehicle.

|                              | TIRE AND LOADING INFORMATION<br>PNEU ET INFORMATION DE CHARGEMENT |                                      |                             |                                      |        |
|------------------------------|---|--------------------------------------|-----------------------------|--------------------------------------|--------|
|                              | SEATING CAPACITY<br>NOMERE DE PLACES                              | TOTAL                                | FRONT                       | REAR<br>ARRIERE                      |        |
| THE COMBINED I               | REIGHT OF OCCUPANTS A<br>E D'OCCUPANTS ET DE CAN                  | ND CARGO SHOULD<br>GAISON NE DEVRAIT | ANNAS EXCEREN               |                                      |        |
| TIRE                         | ORIGINAL TIRE SATE<br>TALLE OU PNEU D'ORIGIN                      | COLD TIRE<br>PRESSION DE GO          | PRESSURE<br>NULACE À FROIDS | SEE OWNER'S MANUAL<br>FOR ADDITIONAL | 200005 |
| FRONT                        | xxxx/xxxx   | xxxxkPa                              | (xxpsi)                     | INFORMATION.                         | 100    |
| ARRIERE                      | xxxx/xxxx   |                                      |                             | DETALS, SE REPORTER                  | 207    |
| SPARE TIPE<br>ROLE DE SECOLR | xxxx/xxxx   |                                      |                             | CONDUCTEUR.                          |        |
|                              |   |                                      |                             | TP08007                              | 7.4    |



Tire pressure can be affected by factors such as tire temperature, outside temperature, time, and altitude.

When tire pressure is low, make sure it is not caused by a leak. If needed, repair as necessary.

After tires are inflated to the recommended pressure, the vehicle may need to be driven at speeds above 16 mph to activate the TPMS and turn off the low tire pressure warning light. DO NOT USE CONSULT TO RESET THE TPMS.