

Classification:

COPYRIGHT® NISSAN NORTH AMERICA, INC.

Date

EL09-043 ITB09-059 October 28, 2009


Reference:

# INTELLIGENT KEY BATTERY REPLACEMENT AND BATTERY DISCHARGE INDICATOR RESET

**APPLIED VEHICLES:** Vehicles equipped with the Intelligent Key type shown below.

#### IF YOU CONFIRM

- The Intelligent Key is the type that has a notch on each side.
  And
- The battery in the Intelligent Key needs to be replaced for any reason.

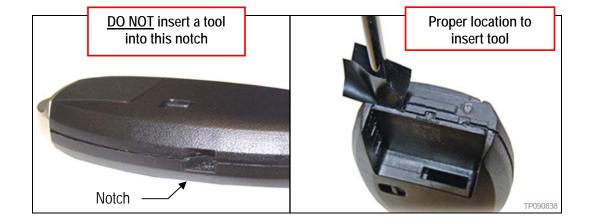

## **ACTION**

- 1. Open the Intelligent Key as described in the Service Procedure, and replace the battery.
- 2. Confirm the battery discharge indicator has reset/is not illuminated in the dot matrix display.

#### NOTES:

- <u>DO NOT</u> insert a tool into the notches of the Intelligent Key to pry it open, as this may damage the printed circuit board (PCB).
- The battery is a maintenance item and is not warrantable.

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.

### **SERVICE PROCEDURE**

- 1. Remove the mechanical key from the Intelligent Key.
- Place a piece of tape on the end of a small flathead screwdriver.
- 3. Insert the screwdriver into either of the slots shown in Figure 1.



Figure 1

- 4. Turn the screwdriver until the two cover pieces separate (see Figure 2).
- 5. Replace the battery.
  - Make sure the + side of the battery faces the bottom cover piece.
- 6. Reattach the two cover pieces by pushing them together.
- 7. Turn on the vehicle and confirm the Intelligent Key battery discharge indicator is not illuminated in the dot matrix display.



Figure 2

- 8. If the indicator is still illuminated:

  - a) Turn off and exit the vehicle, making sure to close the door.b) Re-enter the vehicle and turn it on. The indicator should be off.

2/2 ITB09-059